

Spare Part List

No.	Description	No.	Description	No.	Description
1	O-ring	16	Crank Oil Seal	31	Support Washer
2	3/8 Plug	17	Connecting Rod	32	Flat Washer
3	Bolt	18	Connecting Pin	33	Main Water Seal
4	Crankcase Cover	19	Plunger	34	Main Water Seal Washer
5	Packing Ring	20	Bearing	35	Manifold
6	O-ring	21	O-ring	36	O-ring
7	End Cover Glass	22	Side Indicator	37	Plug
8	Oil Level Indicator	23	Side Oil Level	38	O-ring
9	Shim	24	Side Plate	39	Checkving Valve
10	Crankcase	25	Bolt	40	O-ring
11	Dipstick	26	Plunger Oil Seal	41	Nut
12	Dipstick Cap	27	Oil Seal Support	42	Valve Nut
13	Crankshaft	28	Rear Guide Ring	43	Washer
14	Bearing	29	O-ring	44	Screw
15	Circlip	30	Aux. Water Seal		